



1854239


X-Hyde Park Bench

Parts List


A.	Seat Assembly	1 pc
B.	Left Wing Assembly	1 pc
C.	Right Wing Assembly	1 pc
D.	Back Assembly	1 pc
E.	Stretcher	1 pc
F.	Left Front Support	1 pc
G.	Right Front Support	1 pc
H.	Long Flat Allen Head Bolts	12 pcs
I.	Short Flat Allen Head Bolts	2 pcs
J.	Sunk Allen Head Bolts	6 pcs
K.	Allen Head Wrench	1 pc
L.	Optional Allen Head Screwdriver Bit	1 pc

- * Please make sure that you have all the parts indicated above before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * Take care not to overtighten bolts if using supplied Allen Head Screwdriver Bit.


Hardware Illustrations

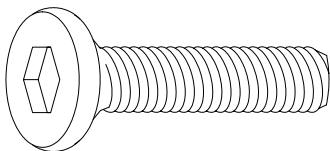

H. Long Flat Allen Head Bolt

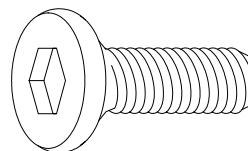

I. Short Flat Allen Head Bolt

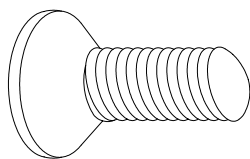

J. Sunk Allen Head Bolt



1854239

X-Hyde Park Bench

Attach Left & Right Wing Assemblies and Left & Right Front Supports

Parts required

A.	Seat Assembly	1 pc	H.	Long Flat Allen Head Bolts	6 pcs
B.	Left Wing Assembly	1 pc	I.	Short Flat Allen Head Bolts	2 pcs
C.	Right Wing Assembly	1 pc	J.	Sunk Allen Head Bolts	2 pcs
F.	Left Front Support	1 pc	K.	Allen Head Wrench	1 pc
G.	Right Front Support	1 pc	L.	Optional Allen Head Screwdriver Bit	1 pc

1. **Attach Left & Right Side Wing Assemblies (B, C)** Align the pre-drilled holes in the middle rails of Left & Right Wing Assemblies (B, C) with the pre-threaded holes in the ends of Seat Assembly (A). Secure with Long Flat Allen Head Bolts (H) using Allen Head Tool (K or L). See Illustration #1.
2. **Attach Left & Right Front Supports (F, G)** Align the pre-drilled holes in the metal plates of Left & Right Front Supports (F, G) with the pre-threaded holes in the Seat Assembly (A). Secure, but do not fully tighten with Short Flat Allen Head Bolts (I) using Allen Head Tool (K or L). Adjust and align the pre-drilled holes in the other ends of **Left & Right Front Supports (F, G)** with the pre-threaded holes in the back legs of Left & Right Wing Assemblies (B, C). Secure, but do not fully tighten with Sunk Allen Head Bolts (J) using Allen Head Tool (K or L). See Illustration #1.
3. **Adjust and tighten all bolts at this time.**

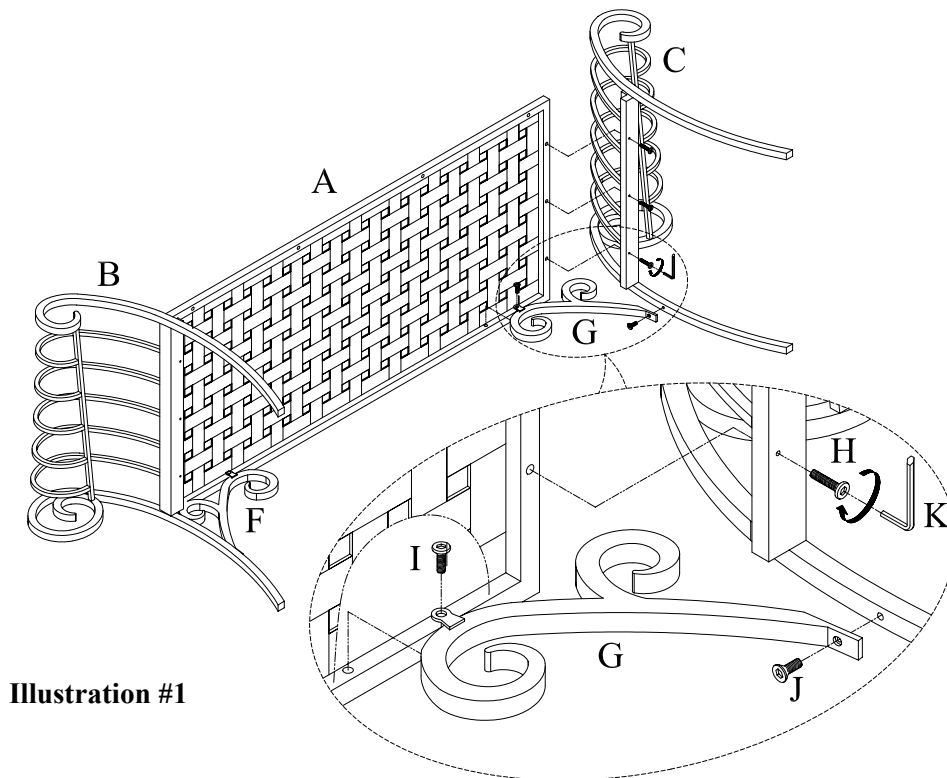


Illustration #1



1854239

X-Hyde Park Bench

Attach Back Assembly & Stretcher

Parts required

A.	Seat Assembly	1 pc	H.	Long Flat Allen Head Bolts	6 pcs
B.	Left Wing Assembly	1 pc	J.	Sunk Allen Head Bolts	4 pcs
C.	Right Wing Assembly	1 pc	K.	Allen Head Wrench	1 pc
D.	Back Assembly	1 pc	L.	Optional Allen Head Screwdriver Bit	1 pc
E.	Stretcher	1 pc			

4. **Attach Back Assembly (D)** Align the pre-threaded holes in the Back Assembly (D) with the pre-drilled holes in the Seat Assembly (A) and top of Left & Right Wing Assemblies (B, C). Secure with Long Flat Allen Head Bolts (H) using Allen Head Tool (K or L). See Illustration #2.
5. **Attach Stretcher (E)** Align the pre-drilled holes in the ends of Stretcher (E) with the pre-threaded holes in the legs of Left & Right Wing Assemblies (B, C). Secure with Sunk Allen Head Bolts (J) using Allen Head Tool (K or L). See Illustration #2.

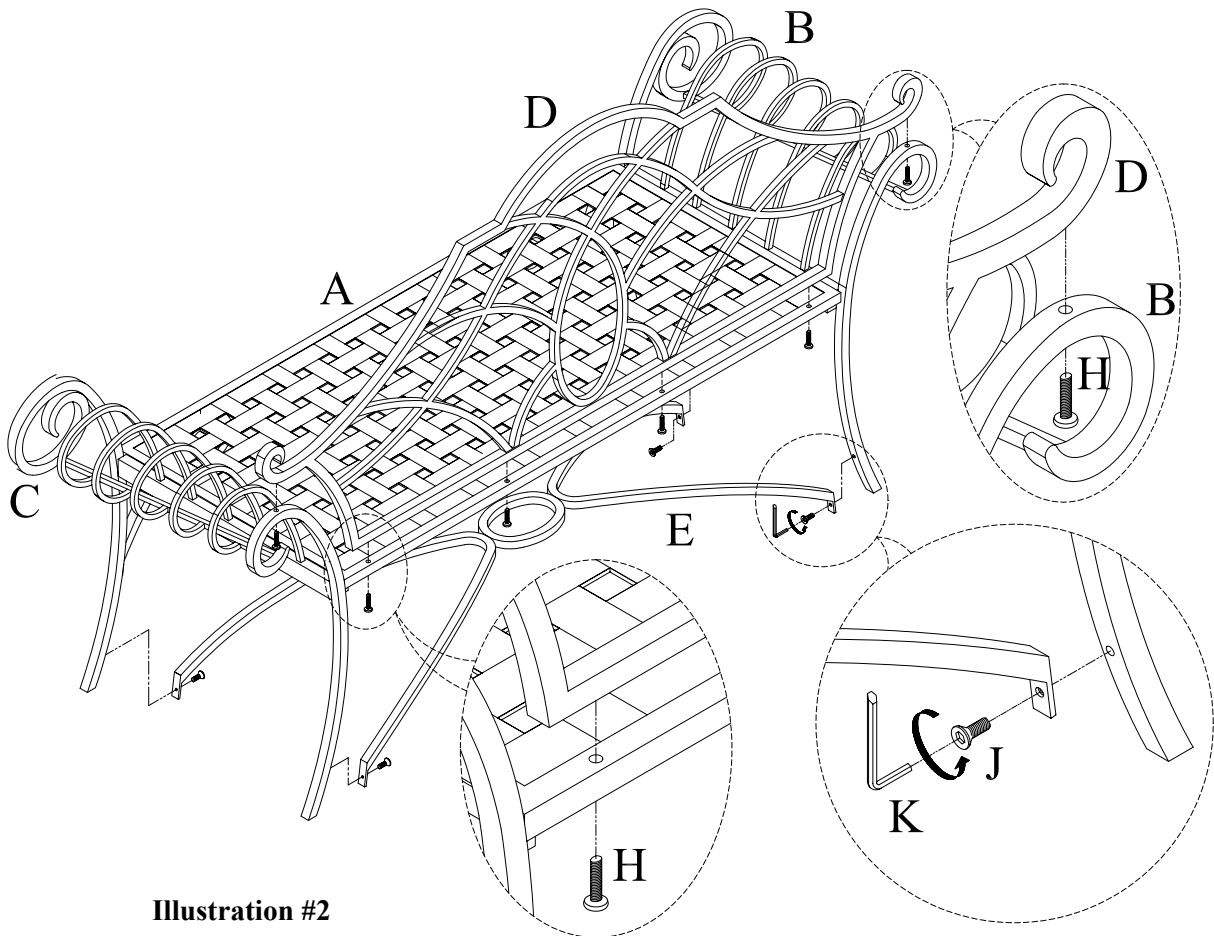


Illustration #2